



# USER MANUAL

• **Alpha-Numeric Display Pager** •

**MODEL: AL-A26e / AF-A26e**



GA0922a26fx-e



## Set Mail Drop History

The user could select how many sets they want under "Mail Drop" cursor.



 
Move the cursor to "MAIL DROP AREA".

Press **II** then press **▶** to the "SET HISTORY"



Press **II** to into select "Sets".

Press **◀** or **▶** to move the "▲". When you move the "▲" to under "5", it means you select 5 sets under this cursor. Move to "8", means 8 sets.




Press **II** to confirm your setting.

Control Buttons .....	1
Features and Functions .....	2-3
LCD Display .....	4
Function Operation.....	5-20
Reading a Message .....	5
Locking Message .....	6
Unlocking Message .....	7
Deleting Message .....	8
Deleting All Message .....	9
Move to Message Memo .....	10
Setting Alert .....	11
Pager On / Off .....	13
Setting Auto Sleep .....	14
Setting Alarm .....	15
Setting Time And Date .....	16
Setting Scroll .....	17
Setting Zoom In Or Zoom Out .....	19
Reading Mail Drop .....	20
Moving The Cursor .....	21
Reading Personal Message .....	22
Reading Full Message .....	23
Back-light / Duplicate .....	24
Error Message / Battery Gauge .....	25
Set Mail Drop Alert .....	26
Set Mail Drop History.....	27

## Control Buttons

 MODEL-A28

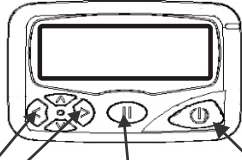

Select Button

Function Button

Read Button

### Read Button

- to read message
- to turn on back-light
- to turn on power

### Select Button

- to move the cursor
- to preview message by cycles

### Function Button

- to display the function menu
- to enable the function mode

 
## Set Mail Drop Alert

Press **▼** to move the cursor to the "MAIL DROP AREA"..


Press **||** , to display the function menu.

 
Press **◀** or **▶** , to move the cursor to set mail drop alert, "CHIRP ON". If you already turned on the alert, the screen will show "CHIRP OFF". **||**

Press **⏻** , to activate the function .Or press **⏻** , to exit the function .






 
### Error Message

If the error message is received. The  symbol is shown in the top left-hand corner of the display, indicates the message status as a Error message.



### Battery Gauge

The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range from  (full),  (1/2),  (low). Whenever the low battery shows on display, Please replace the new battery to make sure the pager is in receivable condition.




### Features and Functions

- 4-Line , 84 English Alpha Character Memory
- Easy-To-Read Back-Lit Display
- Up To Memory Capacity 259,056 Characters.
- 16 Memory Slots + Message Full 10 sets
- Personal Message Memory : 20 sets , Mail Drop Available
- Show Time Of Day And Date
- User Selectable 12 / 24 Hour Clock
- Message Date And Time Stamping
- Incomplete Message-In Indication
- Duplicate Message Indicator
- Locks Important Message (Up To 10 Sets)
- All Or Individual Message Delete
- Unread Message Indicator , Reminder Alert

Low Battery Alert , Low Battery Indicator  
 Zoom The Display - To Enlarge Message For Easy Read Ability  
 Message Full Indication , Message Full Auto Storage  
 Message Preview For A Quick Look At Each Message  
 Message Move to Memo ( User selectable )  
 Service Area Indication  
 5 Built-In Alarm Clocks  
 4 Beep Alerts / Silent Vibration / Silent then Beep / 8 Musical / Sleep Mode  
 Private Time - For The Ability To Turn Off All Pager Alerts During Pre-Selected Times  
 Mail Drop Alerts  
 Save Message When Off And When Changing Battery  
 Selectable Auto Scroll Speed; Fast, Middle, Slow, or Off

 
## Backlighting

You can manually activate the back-lit at any time by pressing and holding  for three seconds . If no other buttons are pressed, the back-lit automatically turns off when the pager returns to the standby mode .

## Duplicate Message


When the pager receives a duplicate message, only the latest message will be displayed on the LCD screen.

The  symbol shown in the top left-hand corner of the display , indicates the message status as a "Duplicate Message".




## Reading Full Message

 Press ◀ or ▶, to move the flashing icon to the 𐀀 symbol.



Press ⏏, to read message.

 When the 𐀀 symbol is shown in the top left-hand corner of the display, it indicates the message status as a full message.



## LCD Display



Pager Status Symbols	Message Status Symbols	Function Menu Symbols
⊙ POWER ON INDICATOR	▲ MESSAGE IN MEMORY	⬆ UP OR ESCAPE
🎵 MUSIC ALERT	📂 MESSAGE SELECTING	⏏ SET ALERT
🔔 BEEP ALERT	🔒 MESSAGE LOCK IN MEMORY	🔕 PAGER OFF
🕒 AUTO SLEEP INDICATOR	🔒 MESSAGE LOCK SELECTING	🕒 SET AUTO SLEEP
🚨 ALARM INDICATOR	📄 PERSONAL MESSAGE	🔔 SET ALARM
📄 AUTO SCROLL INDICATOR	📄 FULL MESSAGE	⌚ SET TIME
🔋 BATTERY CAPACITY INDICATOR	📄 PERSONAL MESSAGE SELECTING	🔄 SET SCROLL
📶 OUT OF RANGE INDICATOR	📄 FULL MESSAGE SELECTING	🔍 ZOOM IN / ZOOM OUT
⚠ ERROR MESSAGE	📄 MAILDROP IN MEMORY	🔒 MESSAGE LOCK
📄 DUPLICATE MESSAGE	📄 MAILDROP SELECTING	🗑 MESSAGE DELETE
📄 MAIL DROP MESSAGE	📄 DUPLICATE MESSAGE	🗑 DELETE ALL
📄 MEMO MESSAGE INDICATOR		📄 MOVE TO MEMO
		📄 MAIL DROP ALERT
		📄 SET HISTORY

 
### Receiving And Reading Your Message

A flashing ▲ symbol indicates you have a message that has not been read. (The symbol ▼ mail drop shows on screen by flashing).

Press ◀ or ▶, to preview the message.

Press ⏪ to display your message. Press ⏩ again, to view the next screen.

If you have set " Auto Scroll " , your pager will scroll through your message screen by screen automatically .




### Reading Personal Message

Press ◀ or ▶, to move the flashing icon to the ▲ symbol.

Press ⏪, to read message.

 When the ▲ symbol is shown in the top left-hand corner of the display, this indicates the message status as a personal message.








## Moving the Cursor

Press ◀ or ▶ to move cursor to the □ icon flashes, indicating the present position of the message you are going to read.

Press ▼ to move cursor to the second row; "MAIL DROP AREA".

   Press ▲ to move the flashing icon to the top row; "MESSAGE AREA".





## Locking Messages

Press ◀ or ▶ to move the cursor to the desired flashing symbol □.

Press || then press ◀ or ▶ to select the desired message to lock.

Press || to lock the message.

  The symbol "□" is displayed, indicating the status of the message in memory.



## Unlocking Messages

Press ◀ or ▶, to move the cursor to the lock message  to unlock.

Press **||**, then, press ◀ or ▶, to "MESSAGE UNLOCK" Mode.

Press **||**, to unlock the message.

```

  @@@@@@P@@@@@P@@@@@P  12:35PM  4/15/98
  ^MMMMMMMM
  
```

```

  @@@@@@P@@@@@P@@@@@P  12:35PM  4/15/98
  ^MMMMMMMM
  ESCAPE
  @ @ @ @ @ @ @ @ @ @ @ @
  
```

```

  @@@@@@P@@@@@P@@@@@P  12:35PM  4/15/98
  ^MMMMMMMM
  MESSAGE UNLOCK
  @ @ @ @ @ @ @ @ @ @ @ @
  
```

```

  @@@@@@P@@@@@P@@@@@P  12:35PM  4/15/98
  ^MMMMMMMM
  
```

## Reading Mail Drop

Press ▼ to move the flashing icon in the second row.

Press ○, to read message or press ◀ or ▶, to move the icon to the desired Mail drop.

The features allows 14 sets Mail Drop

```

  @@@@@@P@@@@@P@@@@@P  12:35PM  4/15/98
  ^MMMMMMMM
  
```

```

  @@@@@@P@@@@@P@@@@@P  12:35PM  4/15/98
  ^MMMMMMMM
  04: Sport NEWS:
  Pacific School Games -
  
```


```

  @@@@@@P@@@@@P@@@@@P  12:35PM  4/15/98
  ^MMMMMMMM
  05: CNN NEWS:
  Naturally isolated by the
  
```


```

  @@@@@@P@@@@@P@@@@@P  12:35PM  4/15/98
  ^MMMMMMMM
  05: CNN NEWS:
  Naturally isolated by the
  world's highest mountain
  barriers, Tibetans also
  
```

 
 
## Setting Zoom In / Zoom Out

Press **||** , then press **◀** or **▶**, to "ZOOM IN".(symbol  ), Then, press **||** to confirm..

The letters on screen enlarge and become two lines to read.

Or press **◀** or **▶** to move the cursor again to " ZOOM OUT " (symble  ), and press **||** to complete.

The letters on screen change to four lines to read.







## Deleting Messages

Press **◀** or **▶** to move the cursor to select the message you desire. Press **⏏** to read the message.

Press **||** then press **◀** or **▶** , to display " MESSAGE DELETE " Mode.

    When " MESSAGE DELETE " is displayed on the screen , press **||** to show " MESSAGE DELETE ? " on the screen , If you want to delete then press **⏏** to delete the message. If you do not want, press **⏏** to quit.






## Deleting All Messages



( All unlocked and the read messages )

Press **||** then press **<** or **>** ,  
to " DELETE ALL " Mode .

 Press **||** to show " DELETE  
ALL ? " on the screen. If you  
want to delete all messages  
then press **||** ,all unlocked  
and the read messages are  
deleted. If you do not want  
then press **⏏** to quit.



  When the Auto scroll is set,  
the **⏏** symbol is displayed  
on screen.





## Setting Scroll

Press **II**, then , press **<** or **>**, to " SET SCROLL " Mode .

Press **II**, to enable scroll automatically.

Press **>** to set speed high, press **<** to set speed low or off the auto scroll function.

  - (1) ■■ -- Slow.
- (2) ■■■ -- Middle.
- (3) ■■■■ -- Fast.
- (4) X ----- Off.



## Move Message To Memo

Press **<** or **>**, to move the cursor to the desired storing message. Press **II** to read the message.

Press **⓪** then press **<** or **>**, to move to " MOVE TO MEMO ".

Press **II**, to move the flashing icon message automatically into your memo mail .



 
 
 
## Setting Alert

Press **II**, then **☐**, press **◀** or **▶** once to display " SET ALERT " Mode .

Press **II**, to enable "SET ALERT".

Press **▲** or **▼**, to move the cursor to the desired alarm mode .(Alert **☐** / Musical **🎵** / Vibration **📳** / Sleep **🌙** are optional )

Press **◀** or **▶**, to move to the cursor to the desired tone or music .





## Setting Time And Date

Press **II**, then **☐**, press **◀** or **▶** once until "SET TIME " Mode is displayed.

Press **II**, to enable set time. .

Press **◀** or **▶**, to move the cursor to the hour / minute digit .Then press **▲** or **▼** adjust each set of digits : AM/ PM/24 hr / month / day.

  Press **II** to activate the time and date change. Press **☐** to quit.



## Setting Alarm ( 5 alarms )

 
 
Press **II** , then , press **◀** or **▶** to "SET ALARM "Mode.

Press **II** , to enable.

Press **◀** or **▶** , to move the cursor.

Press **▲** or **▼** , to set the alarm status either alarm enabled , alarm disabled or set time.


Press **II** setting the alarm is completed. Press **○** to quit.



Press **II** setting the alert is completed. Press **○** to quit.

The **◀** or **▶** symbol is displayed if the message receiver is in the audible or musical mode .

 The **◀** or **▶** symbol won't display on screen if the receiver is in the silent mode or sleep mode.



### Turning Your Pager Off

 
Press **II** , then , press **◀** or **▶** , to " PAGER OFF " mode.

Press **II** , till " PAGER OFF ? " appears on the screen.

Press **II** , to turn the pager off .

After turning your pager off , the screen will be empty.

Press **⓪** , to turn the pager power on.

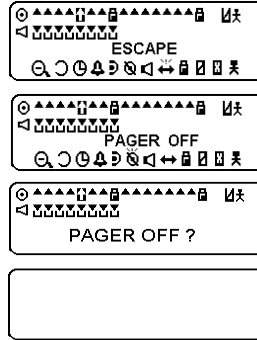

### Setting Auto Sleep

Press **II** , then, press **◀** or **▶** to display " Auto Sleep " mode.

Press **II** , to enable " Auto Sleep Set " Mode.

Press **▲** or **▼** to select "open" or "close" (symbol **Ⓧ** or **-** ) and adjust the digits, press **◀** or **▶** for moving the cursor.

Press **II** setting auto sleep mode is completed. The screen returns to stand-by status.

**Ⓧ** is displayed when the Auto Sleep mode is set.

The enable **z** symbol indicates your pager is during setting status.

