

			<b>You are here</b>
<b>Getting Started</b> .....1	<i>Buttons, Backlight</i> .....2	<b>Functions</b> <i>Turn ON, Turn OFF</i> .....3	<b>Function Menu</b> .....4
<b>Alerts</b> .....5	<i>Silent Mode</i> .....6	<i>Time/Date</i> .....7	<i>Private Time</i> .....8

<i>Alarm</i> .....9	<i>Pager Control</i> .....10	<b>Messgaes</b> <i>Personal Folder</i> .....11	<i>Receiving messages</i> .....12
<i>Message full indication</i> .....13	<i>Personal Folder Menu</i> .....14	<i>Mail Folder</i> .....15	<i>Mail folder function menu</i> .....16
<i>Notebook</i> .....17	<i>Notebook folder function menu</i> .....18	<b>Maintenance</b> <i>Battery info, Pager care</i> .....19	<i>Battery Installation</i> .....20

 
# Getting Started

## Pager Features

The Bravo 800 offers a wide range of useful features.

- 4-Line, 20 English character screen
- Up to 30 personal messages
- Up to 15 mail messages
- 16 notebook slots for message transfer from Personal and Maildrop
- 8 user selectable pleasing alerts
- Vibrator alert and Vibra-call
- Quick access to Silent mode
- 3 speed scrolling of message
- Group call alert
- Private Time
- Backlit display for ease of reading in dark
- Message zoom in/out mode
- Unread message indication

## Pager Control Buttons

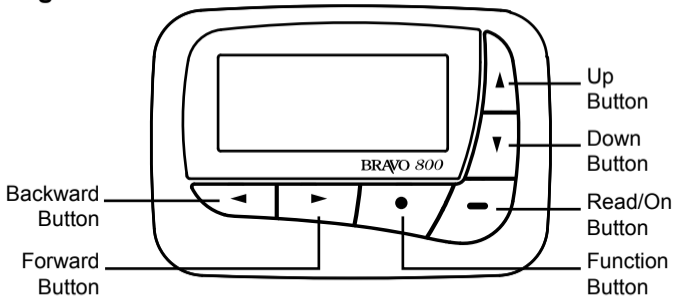


## Backlight

 
Press and hold function button for 2 seconds to turn on the backlight manually.  
Press and hold function button for 2 seconds to turn off the backlight manually.  
The Backlight turns on automatically when a new Personal or Mail message is received.\*

\*Operator dependent

# Function Details



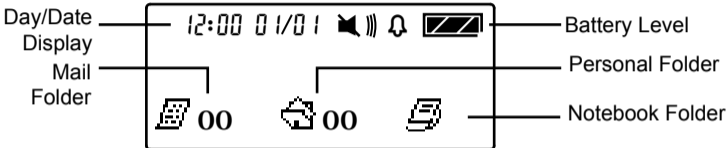


## Pager ON

Press and hold  for 2 seconds to turn on the pager.



The pager returns to the standby screen after the time out period. Time, date and battery level are at the top of the screen and the power-up prompt\* displays in the middle of the screen.

## Pager OFF

Press  to go to Function Menu screen, press  to select TURN OFF function. Then press . "TURN OFF?" is displayed. Press  again to confirm turning your pager off, or  to cancel.

 
\*Operator dependent

## Battery Level


- When the pager is on, the battery level is displayed on the top right side of the display.

## Function Menu

- Press **●** to enter the Function Menu screen from the Main Menu screen.
- Press **◀ / ▶** to move to the next/previous Function Menu icon.
- Press **●** to enter the current selected function sub-menu.
- Press **■** to cancel and return to the Main Menu.

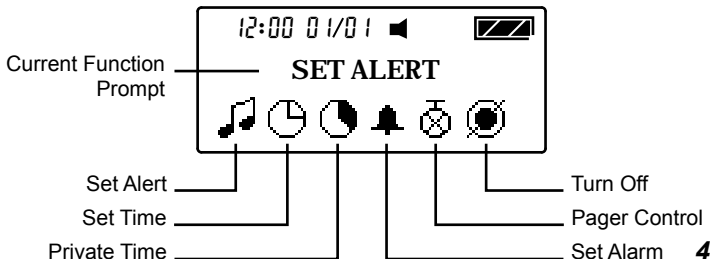

## Alert mode

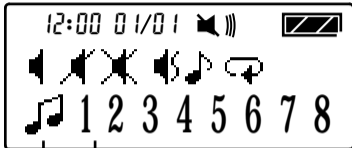 

Melody Mode Icon         8 pleasing alerts

- Press ◀ / ▶ to move to different alert modes; from silent to sleep, vibra-call, chirp, continuous alert and pleasing alert 1 to 8.
- Press ● to confirm your selection.

The alert status is updated in the status screen shown below:

- |   |                          |                          |                          |   |          |
|---|--------------------------|--------------------------|--------------------------|---|----------|
| <input type="checkbox"/> Audio:                 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> Sleep:                             |          |
| <input type="checkbox"/> Pleasing alert, chirp, | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> receives message but no alert.     |          |
| <input type="checkbox"/> continuous alert.      | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |   |          |
| <input type="checkbox"/> Silent:                | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> Vibra-call:                        |          |
| <input type="checkbox"/> Vibration.             | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> vibration followed by audio alert. | <b>5</b> |

### **Quick Access to Silent mode**

- You can use ▼ to quick access Silent mode if your pager is currently in Audio Alert mode. (Your pager must be on the Main Menu page in order to use this function).

 


- Press and hold ▼ for 2 seconds to access Silent mode.



- Repeat process to return to Audio Alert mode.

## Time and Date

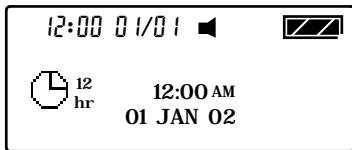




- Press ◀ / ▶ to highlight the hour field then use the ▲ / ▼ Buttons to choose the value.
- Repeat the above step to choose the value of the minutes, date and year.
- Press ● to update your setting and return to the status screen.




## Private Time

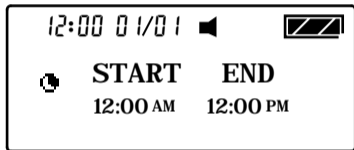 You can set a daily period of time in which your pager will not alert. However, it will still receive messages during this time.



- Press ▲ / ▼ to activate  or deactivate  this function.
- Press ◀ / ▶ to go to the "START" field and press ▲ / ▼ to set the starting time.
- Press ◀ / ▶ to go to the "END" field and press ▲ / ▼ to set the ending time.


## Alarm

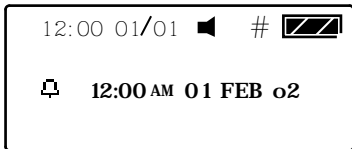 

- Press ▲ / ▼ Button to turn the alarm ON or OFF.
- Press ◀ / ▶ to move to the alarm time field.
- When alarm is turned ON, press ▲ / ▼ Button to change the time field(hour and minute ).
- By setting the following example:  
"9:00AM --/--/--" your alarm will sound **everyday** at 9:00 AM.
- You can optionally set a specific date for your alarm.
- Press ● to update your settings, or ○ to cancel.

## Pager Control

 - Press ◀ / ▶ move to the next control icon.
- Press ● to enter the selected control setting screen.

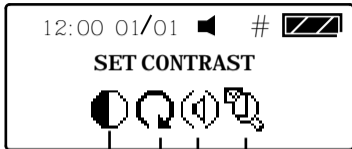

Set Contrast

Set Zoom

Reminder

Auto Scroll

### 1)Set Contrast

- Press ◀ / ▶ to select contrast level.
- Press ● to confirm, or ◻ to cancel.

### 2)Auto Scroll

- Press ▲ / ▼ to make auto scroll active or inactive
- Press ▶ to highlight auto scroll level and use ▲ / ▼ to select "MEDIUM", "SLOW" or "FAST" as the scroll speed.
- Press ● to confirm, or ◻ to cancel.

### 3)Reminder Alert

- Press ▲ / ▼ Button to switch ON
- Press ● to confirm the setting, or ◻ to cancel.
- If there are unread messages, the pager alerts at 2 minute intervals.

 
#### 4)Set Zoom







- Press ▲ / ▼ to switch ON/OFF. Received messages will be displayed twice as large for easy reading.
- Press ● to confirm the setting, or ● to cancel.
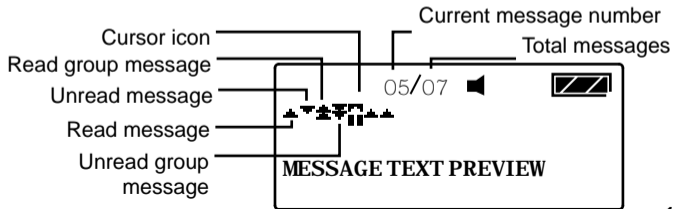
## Message Features

### Personal Folder

- Press ● to enter Personal Folder Screen from the Main Menu screen when the cursor is on the Personal Folder icon.



-  : display content of current message
-  : move to the next message
-  : move to the previous message
-  : move to the previous line of message icons
-  : move to the next line of message icons
-  : enter Personal Folder Function screen

 
## Receiving Message

When a message is received, your pager alerts you according to your set alert mode(Normal message and Priority message are different alerts).

-Press  button to Read the message.



4line x 20 Alpha characters

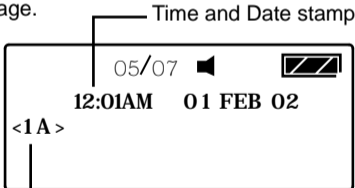

Address source of message received

- When an error message is received and read, "E" appears in front of the message and the incorrect characters blink.
- When a Priority message is received, your pager will alert you with a unique alert no matter what mode the pager is currently in(eg; sleep, vibrate, private time etc.). Priority messages are determined by the operator.


## Message Full Indication



 Message Full  
Indicator

If the Message Full Indicator appears and you have not deleted the old messages, the new received messages will overwrite the old ones.

## Personal Folder Function Menu

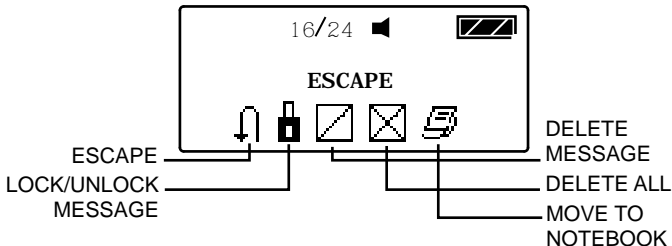


- Press ● to open the Personal Folder Function Menu screen.
- Press ► to move to the next Personal Folder Function prompt.
- Press ● to activate the selected function.
- A confirmation prompt "?" comes with "DELETE ALL" and "DELETE MESSAGE".
- Press ● again to confirm, or ■ to cancel.
- Please note. Locked messages cannot be deleted. Additionally, unread messages cannot be deleted by using "DELETE ALL".

You can enter Personal Message Function menu by pressing ● when you are reading the message. The operation is the same as the Personal Folder Function Menu except there is no "DELETE ALL".

## Mail Folder (Information Service)

 Your pager can receive information such as world news or financial report(the extent of the information received depends on your service provider)

- Press ● to enter the Mail Folder Screen from the status screen when the cursor is on the Mail Folder icon.

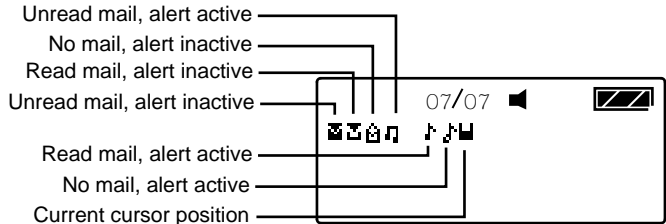




- You can store a maximum of 5 mail messages from the same source in one slot when History Mode is turned on.

## Mail Folder Function Menu

 Press ● to enter the Mail Folder Function Screen from the Mail Folder Screen

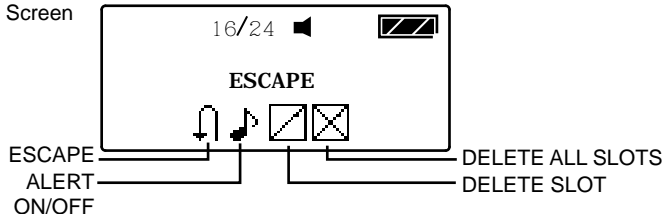


- Press ◀ / ▶ to move to the next Mail Folder Function prompt.
  - Press ● to activate/deactivate the selected function.
- A confirmation message "?" comes with "DELETE SLOT" and "DELETE ALL SLOTS".
- Press ● again to confirm, or ○ to cancel.




- You can enter Mail Message Function menu by pressing ● when you are reading the mail. The operation is the same as the Mail Folder Function menu except there is no "DELETE ALL SLOTS" and there is an additional function of "MOVE TO NOTEBOOK". ie. you can move individual Mail messages to the Notebook Folder.

## Notebook

 You can store up to 16 important Personal or Mail messages in your Notebook Folder. When the notebook is full, "NOTEBOOK FULL" appears if you attempt to store Personal or Mail messages to the Folder.

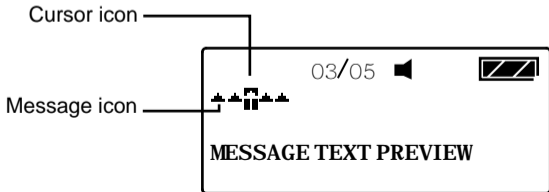
- Press the ■ Button to enter the Notebook Folder screen from the status screen when the cursor is on the Notebook Folder icon.




-  : display content of current slot
-  : move to next icon slot
-  : enter Notebook function Folder screen

## Notebook Folder Function Menu

 
- Press  to enter the Notebook Folder Function Screen from the Notebook Folder Screen

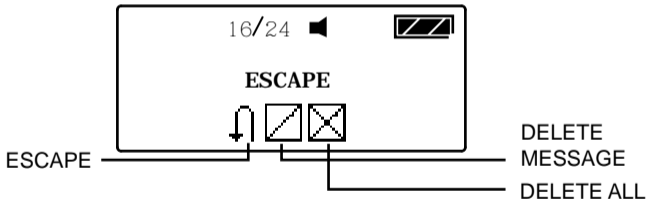

-You can enter Notebook Message Function menu by pressing  when you are reading the message. The operation is the same as the Notebook Folder Function menu except there is no "DELETE ALL".

# Maintenance

 
## Battery Information

This pager is designed to operate on one 'AA' size alkaline battery. When the battery icon reads empty, as follows:  The battery should be replaced. The correct time and any stored Messages will remain intact for up to one minute after removing the battery, if the pager is first turned off in accordance with the "Pager Off" procedure(Page 3).

## Care of your Pager

 To maintain the fine quality of your pager's display screen, please do not subject the pager to extreme temperatures or moisture. Clean the pager housing using a soft non-adhesive cloth moistened with a mild soap and water solution. Wipe the surface with a second cloth moistened with clean water. Do not immerse the pager in water. Do not use any other cleaning solutions.

## To Install or Replace a battery

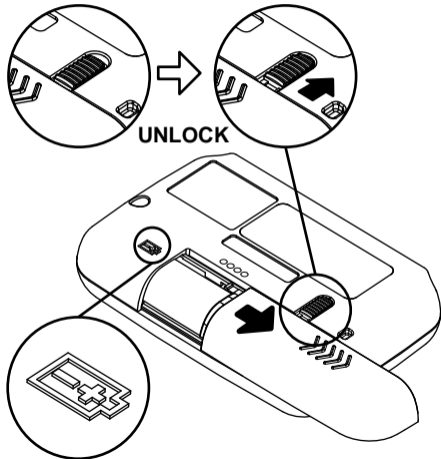

- Ensure that the pager is off.
- Place the pager face down in the palm of your hand
- Unlock the battery door lock by sliding it to the unlocked position.
- Push the battery door and slide it out as shown.
- Slide a new battery into the battery compartment.
- Ensure that the battery polarity is correct as indicated on the housing.
- To close the battery cover, slide the battery door back into position and lock it using the battery door lock